

**Rittal – The System.**

Faster – better – everywhere.

# Enclosure systems VX25, VX SE

Technical documentation  
Load capacity



ENCLOSURES

POWER DISTRIBUTION

CLIMATE CONTROL

IT INFRASTRUCTURE

SOFTWARE & SERVICES

FRIEDHELM LOH GROUP

# Enclosure systems VX25, VX SE

## Contents/general remarks

---

### Contents

<b>1. General notes .....</b>	<b>2</b>	<b>4. Configuration variants .....</b>	<b>8 – 22</b>
<b>2. Transportation variants .....</b>	<b>3 – 6</b>	4.1 Enclosure panels	
2.1 Transportation by crane		– Side panel, screw-fastened and side panel .....	8
– With eyebolts .....	3	– Side panel, hinged .....	8
– With top mounting module and eyebolts .....	3	– Rear panel .....	8
– With combination angles .....	4	– Roof .....	8
2.2 Transportation by fork-lift truck		– Door .....	9
– Transportation of individual enclosures .....	5	– Partial door .....	9
– Transportation of bayed enclosures .....	5 – 6	– Mounting plate .....	10 – 11
2.3 Transportation on castors .....	6	– Partial mounting plate .....	12
		– Partial assembly plate .....	13
<b>3. Installation variants .....</b>	<b>7</b>	4.2 482.6 mm (19") installation system	
3.1 Installation of enclosures		– Swing frame, small .....	14
– Installation on levelling feet .....	7	– Swing frame, large .....	15
– Installation of an enclosure on top of an enclosure .....	7	– Adaptor section/piece, 482.6 mm (19") .....	16
		– Slide rail VX for adaptor section, 482.6 mm (19") .....	17
		4.3 Rail systems	
		– Punched section with mounting flange	
		18 x 64 mm, 23 x 64 mm, 23 x 89 mm .....	18 – 19
		– Punched section without mounting flange	
		23 x 64 mm .....	18 – 19
		– Punched section with mounting flange 14 x 39 mm .....	20
		– Punched rail 18 x 39 mm .....	20
		– Support rail 75 x 20 mm .....	21
		– Support rail 48 x 26 mm .....	21
		– System divider .....	22
		– Screw load .....	22

---

## 1. General remarks

Based on the results of in-depth testing and customer feedback, we hope that this technical documentation will provide you with plenty of useful tips and assistance when transporting and siting large enclosures.

The following technical descriptions for the various load options with the VX25 and VX SE enclosure systems are not warranted properties, and we are unable to accept any liability in this regard.

Additionally, Rittal reserves the right to extend or modify this technical documentation as and when necessary.

To aid understanding of the load specifications given in Newtons, here is the conversion formula for converting into kilograms.

$$F \text{ [N]} = m \text{ [kg]} \cdot g \text{ [m/s}^2\text{]}$$

$$\text{Example: } 9.81 \text{ N} = 1 \text{ kg} \cdot 9.81 \text{ m/s}^2$$


Should you have any further questions or suggestions on the points raised in this technical documentation, please get in touch with your Rittal specialist advisor.

### 2.1 Transportation by crane


All enclosures are suitable for transporting by crane, either for stand-alone siting (VX25, VX SE) or as bayed suites (VX25).



 **Eyebolt 4586.000**  
For transporting enclosures by crane.



**Combination angle 4540.000, 4540.500**  
Combination angles must be used when transporting bayed enclosures by crane, to ensure the optimum distribution of tensile forces.

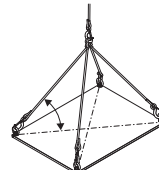

**Cable pull**  
The cable pull angle between the roof plate and the cable has a significant influence on the total permissible load. The cable pull angle must not be less than 45°, and ideally not less than 60°.

#### With eyebolts (VX25, VX SE)



Individual enclosures are safely transported using the eyebolts. For symmetrical loads, the following maximum permissible loads apply:

- $F \triangleq$  at 90° cable pull angle 13600 N
- $F \triangleq$  at 60° cable pull angle 6400 N
- $F \triangleq$  at 45° cable pull angle 4800 N

#### With top mounting module and eyebolts (VX25)

Individual enclosures with top mounting module are safely transported using the eyebolts. For symmetrical loads, the following maximum permissible loads apply:

- $F \triangleq$  at 90° cable pull angle 6800 N
- $F \triangleq$  at 60° cable pull angle 3200 N
- $F \triangleq$  at 45° cable pull angle 2400 N

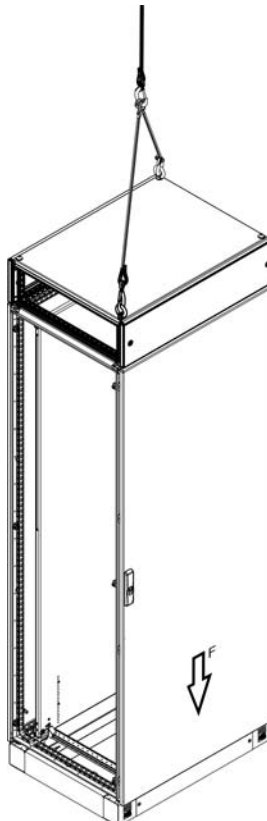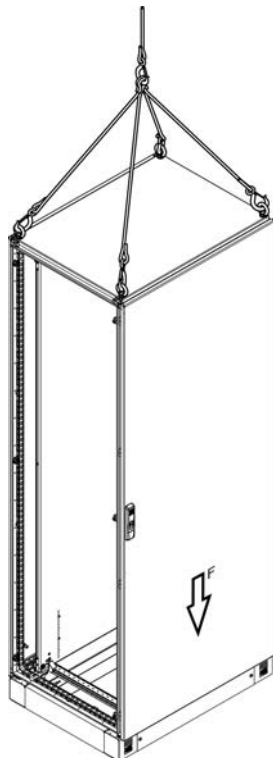

# Enclosure systems VX25, VX SE

## Transportation variants

### 2.1 Transportation by crane

#### With combination angles (VX25)


For the enclosure combination shown here with internal baying brackets 8617.500 and combination angles 4540.000, 4540.500 the load capacity with a cable pull angle of 60° is as follows:

F1 = 7000 N

F2 = 7000 N

#### Note:

- Similarly, with due regard for the specific assembly instructions, the internal baying block 8617.501 and external baying connectors 8617.502, 8617.503 may also be used.

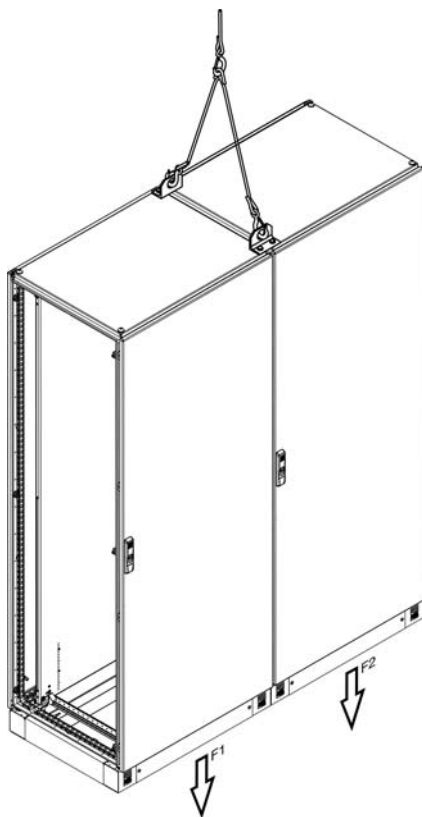

For the enclosure combination shown here with internal baying brackets 8617.500 and combination angles 4540.000, 4540.500 the load capacity with a cable pull angle of 60° is as follows:


F1 = 7000 N

F2 = 14000 N

F3 = 7000 N

#### Note:


- Similarly, with due regard for the specific assembly instructions, the internal baying block 8617.501 and external baying connectors 8617.502, 8617.503 may also be used.

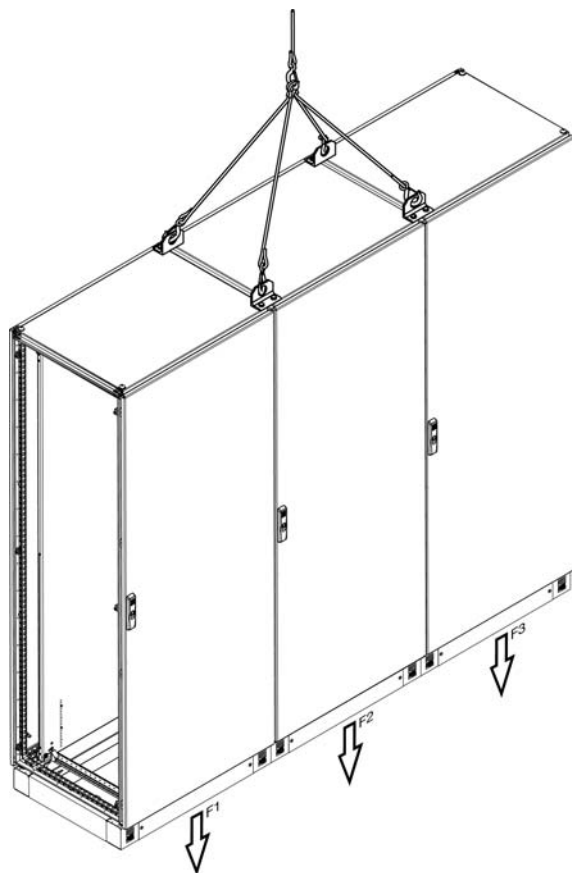

### 2.2 Transportation by fork-lift truck

When transporting individual and bayed enclosures, please take care to ensure that all base/plinth trim panels are fitted, and loads are restricted to the immediate vicinity of the base/plinth corner pieces.


#### Transportation of individual enclosures (VX25, VX SE)

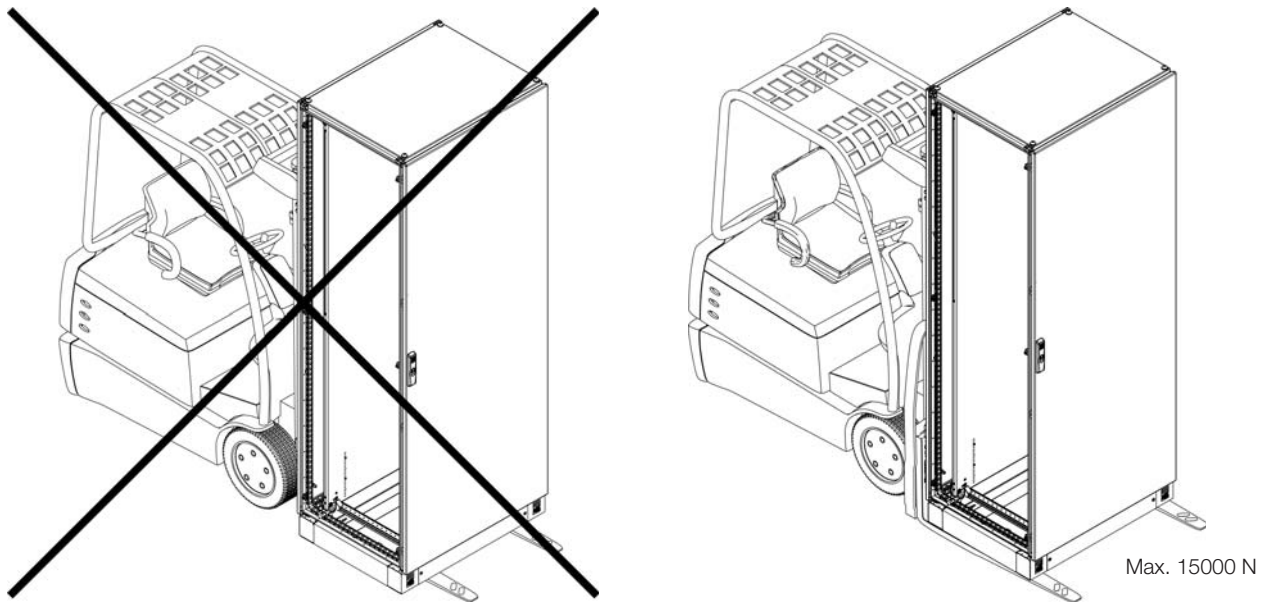

#### Transportation of bayed enclosures (VX25)

**Note:**

– For bayed enclosures, one base/plinth trim panel should be folded over and fitted at the baying point in such a way as to create a stable bayed connection in the base/plinth zone.

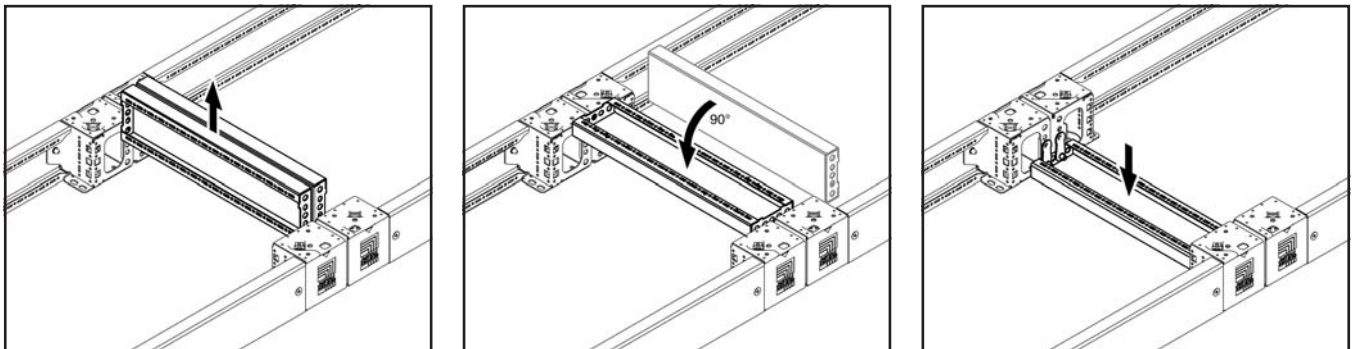

# Enclosure systems VX25, VX SE

## Transportation variants



### 2.2 Transportation by fork-lift truck

#### Transportation of bayed enclosures (VX25)

For the enclosure combinations shown here with internal baying brackets 8617.500, the following loads are supported:

#### Note:

- Similarly, with due regard for the specific assembly instructions, the internal baying block 8617.501 and external baying connectors 8617.502, 8617.503 may also be used. A link to the assembly instructions can be found on our website under the relevant Model No.

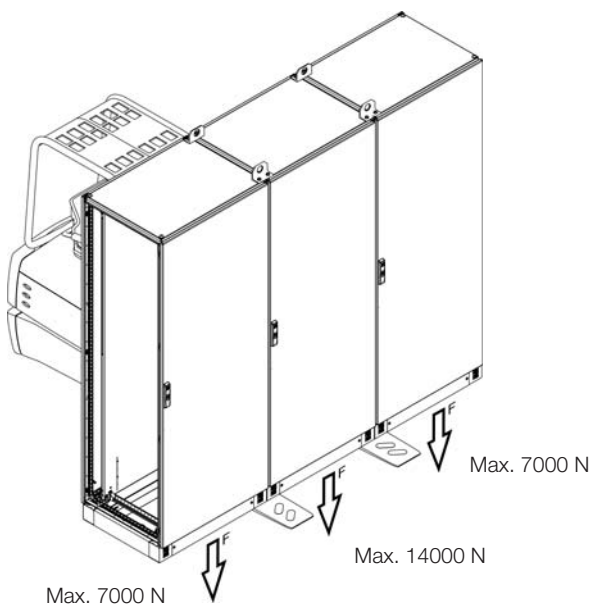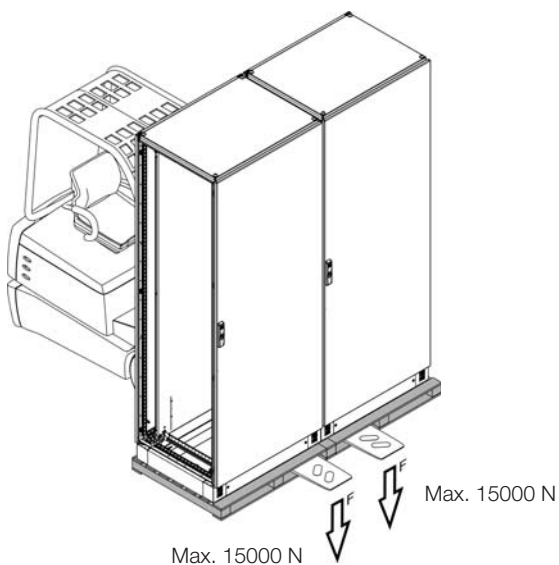




### 2.3 Transportation on castors

#### Transportation of individual and bayed enclosures (VX25, VX SE)

Transport castor for base/plinth system VX 8660.110 (only in conjunction with base/plinth)

#### Max. dynamic load:

- Individual enclosure: When using 4 castors = 3000 N
- Bayed enclosures: When using 6 castors = 1500 N/enclosure

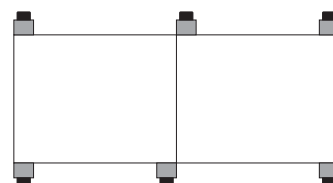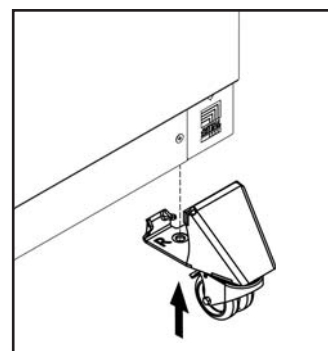
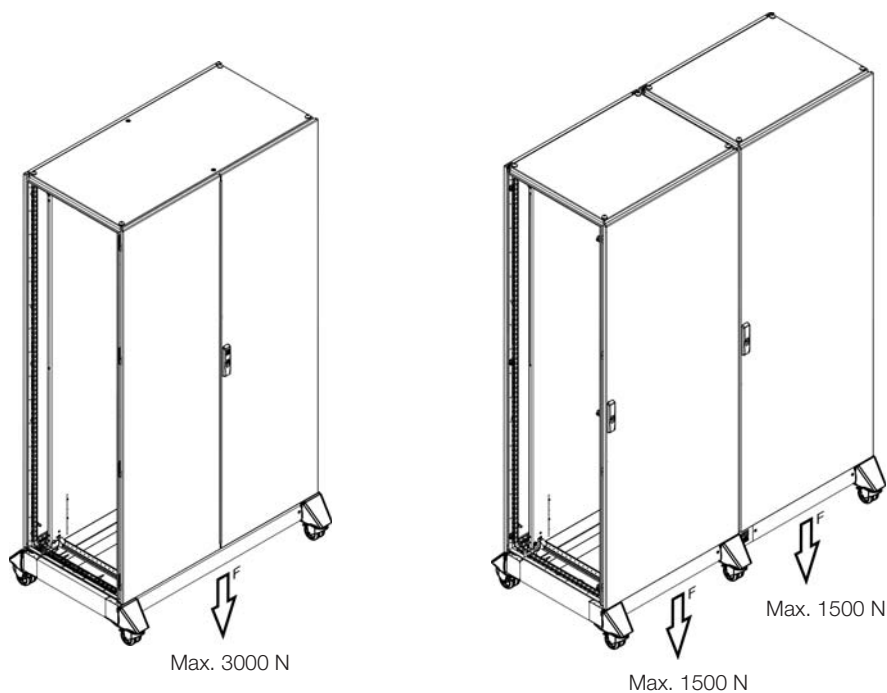




### 3.1 Installation of enclosures



#### Installation on levelling feet 2859.000 (VX25, VX SE)

With a static load, the maximum admissible total load is  $F = 14000 \text{ N}$

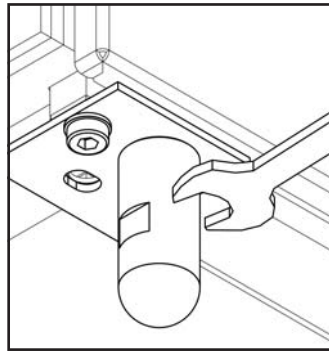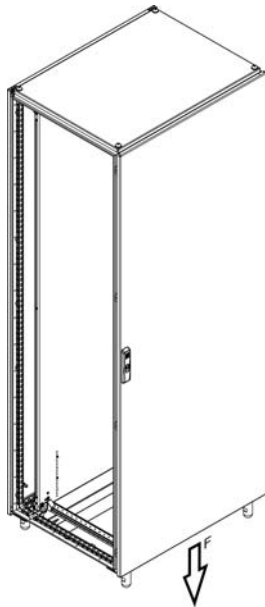


#### Installation on levelling feet 4612.000 and 8100.780 (VX25, VX SE)

With a static load, the maximum admissible total load is  $F = 3000 \text{ N}$  per levelling foot

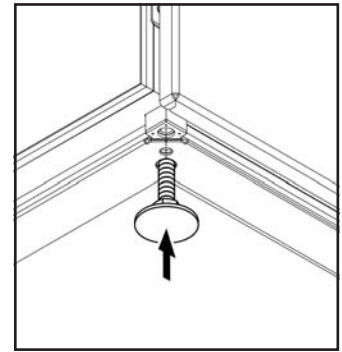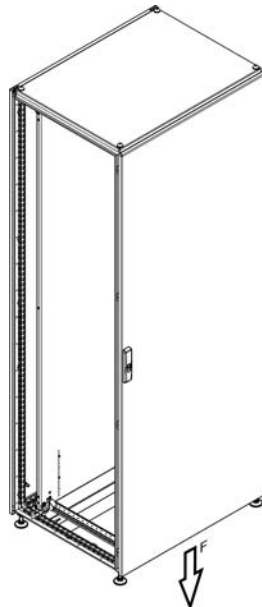

#### Installation of an enclosure on top of an enclosure (VX25)

When installing enclosures on top of one another, the maximum admissible static load for the top enclosure is  $F = 5000 \text{ N}$

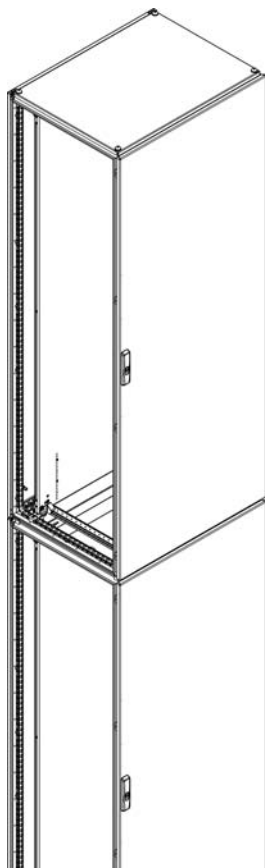

Max. 5000 N


# Enclosure systems VX25, VX SE

## Installation variants

### 4.1 Enclosure panels


#### Side panel, screw-fastened (VX25) and side panel (VX SE)

Provided the Rittal assembly components offer adequate protection against tipping over, the following maximum static loads apply to enclosures:  $F = 900 \text{ N}$

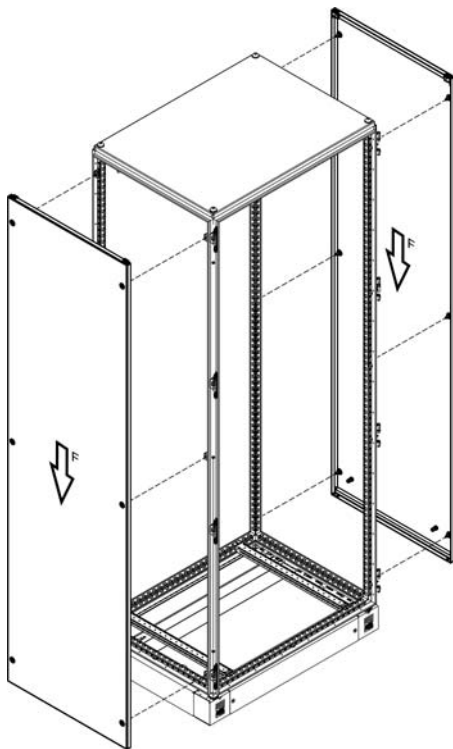

#### Side panel, hinged (VX25)

Provided the Rittal assembly components offer adequate protection against tipping over, the following maximum static loads apply to enclosures:  $F = 200 \text{ N}$

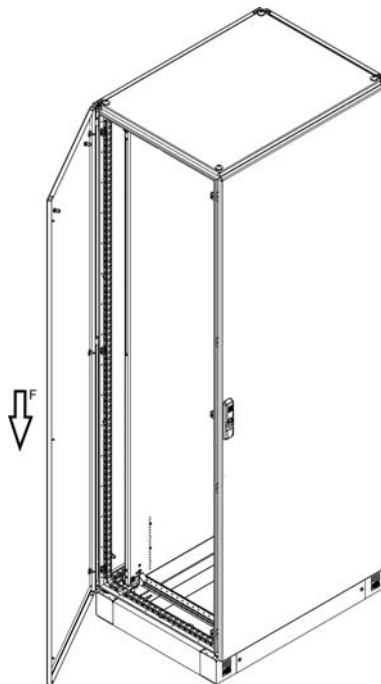

#### Hinge for side panel 8106.260


The 180° opening angle allows unhindered access from the side. May be mounted from the inside or the outside of the enclosure. Simply exchange the three panel brackets for hinges.

#### Note:

- Hinge mounting is only possible in the vicinity of the rear panel


#### Rear panel (VX25, VX SE)

Provided the Rittal assembly components offer adequate protection against tipping over, the following maximum static loads apply to enclosures:  $F = 900 \text{ N}$

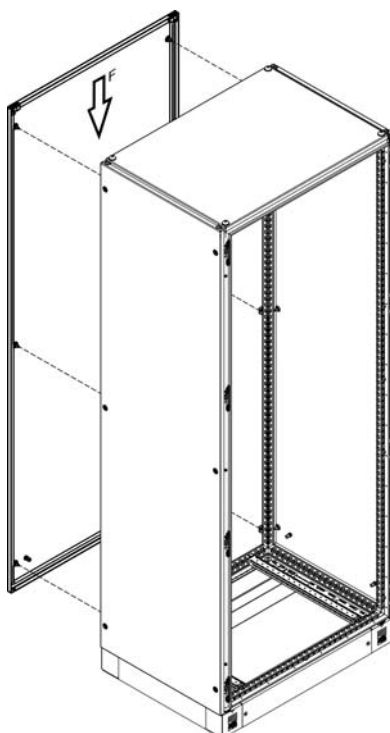

#### Roof (VX25)

Provided the Rittal assembly components offer adequate protection against tipping over, the following maximum static loads apply to enclosures:  $F = 200 \text{ N}$

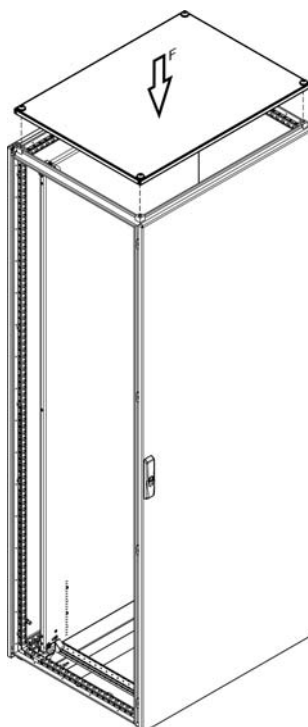

#### Note:


- When installing roof-mounted cooling units, the specific assembly instructions should be observed.



### 4.1 Enclosure panels

#### Door with 130° or 180° hinge (VX25, VX SE)

Provided the Rittal assembly components offer adequate protection against tipping over, the following maximum static loads apply to enclosures:  $F = 900 \text{ N}$  (130°/180°)

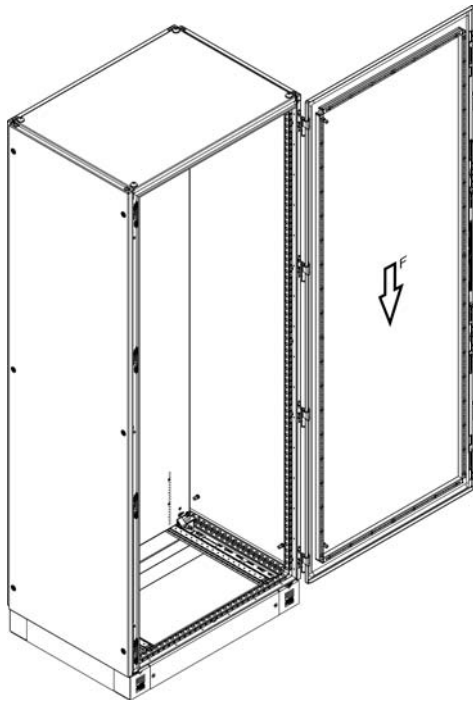


**Note:**

- For VX SE, the TS 180° hinge 8800.710 is required for the maximum static load of  $F = 900 \text{ N}$ .
- With a static load, the use of ride-up roller VX 8618.420 is recommended.

#### Partial door (VX25)

Provided the Rittal assembly components offer adequate protection against tipping over, the following maximum static loads apply to enclosures: See table

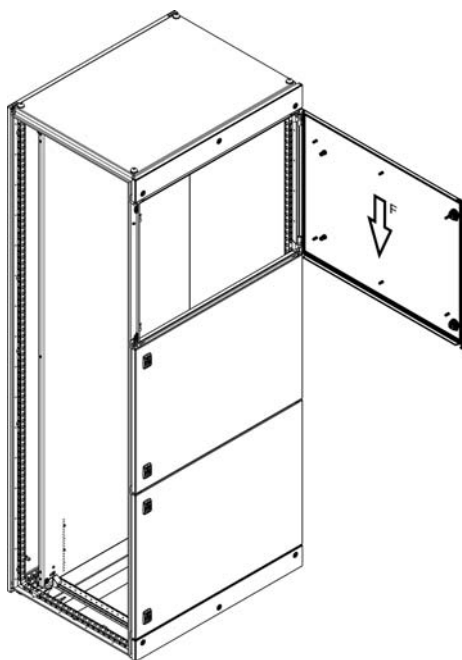

Size W x H mm	F [N]	Model No.
600 x 200	10	<b>9682.162</b>
800 x 200	10	<b>9682.182</b>
600 x 400	10	<b>9682.164</b>
800 x 400	10	<b>9682.184</b>
600 x 600	50	<b>9682.166</b>
800 x 600	50	<b>9682.186</b>
600 x 800	50	<b>9682.168</b>
800 x 800	50	<b>9682.188</b>
600 x 1000	50	<b>9682.160</b>
800 x 1000	50	<b>9682.180</b>

# Enclosure systems VX25, VX SE


## Installation variants

### 4.1 Enclosure panels


#### Mounting plate

All mounting plates are suitable for heavy loads, thanks to their exceptionally stable and functional design.


Mounting position: Flush with the enclosure frame (**VX25, VX SE**)  
F = 6000 N

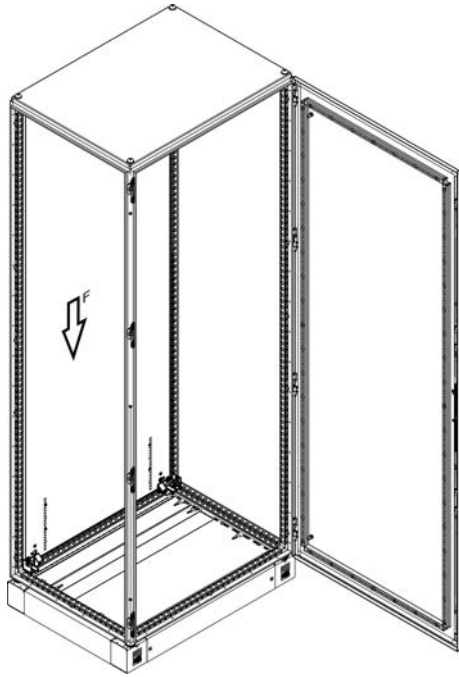

Mounting position: Set forward from the enclosure frame (**VX25, VX SE**)  
F = 5000 N

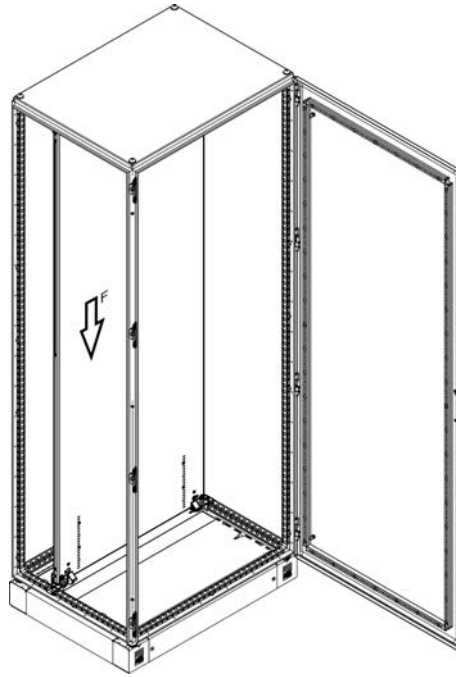

Mounting position: Plus 20 mm, set back behind the enclosure frame (**VX25**)  
F = 3500 N


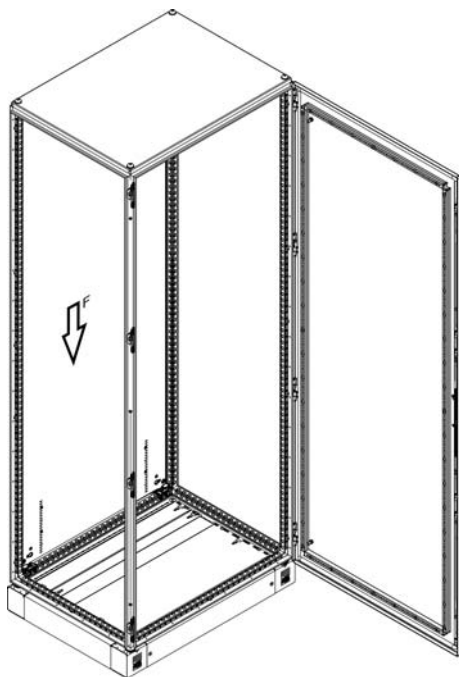


### 4.1 Enclosure panels

Mounting plate (VX25, VX SE)

Installation kit for back-to-back mounting plates 8617.360

F = 2500 N per mounting plate

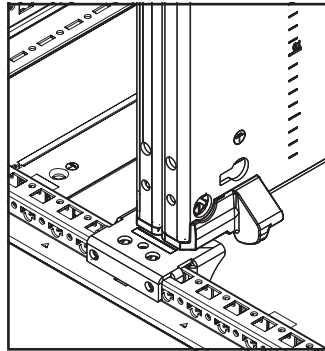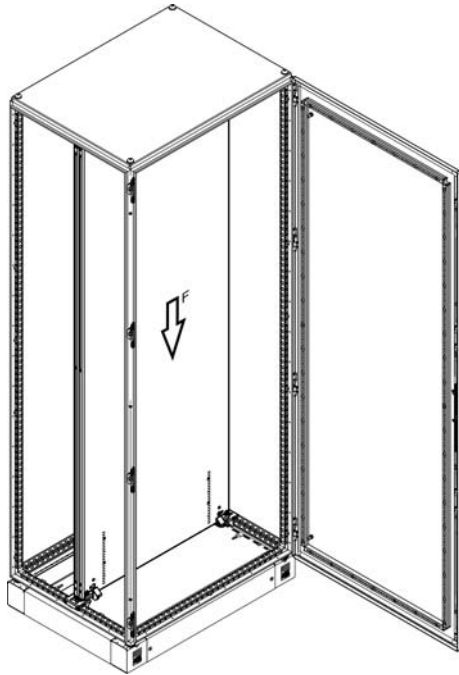


### Mounting plate (VX25)

Slide rail for sliding the mounting plate in from the side.

For mounting in a set-forward position.

For enclosure width mm	F [N]	Model No.
600	5000	<b>8617.400</b>
800	5000	<b>8617.401</b>
1000	5000	<b>8617.403</b>
1200	5000	<b>8617.402</b>

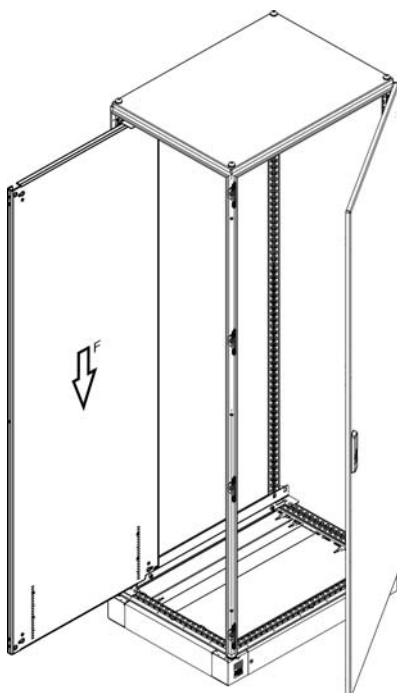

# Enclosure systems VX25, VX SE

## Installation variants

### 4.1 Enclosure panels

#### Partial mounting plate (VX25, VX SE)


The load information for partial mounting plates refers solely to mounting directly on the frame section using the Rittal assembly components provided especially for this purpose.

**Note:**

– For VX SE in conjunction with adaptor rail VX

Vertical installation

Load value F: See table

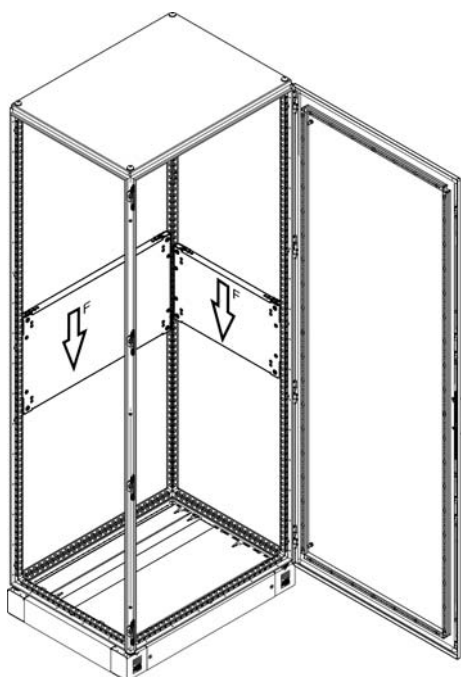


Horizontal installation

in conjunction with punched sections without mounting flanges

23 x 64 mm

Load value F = 1250 N

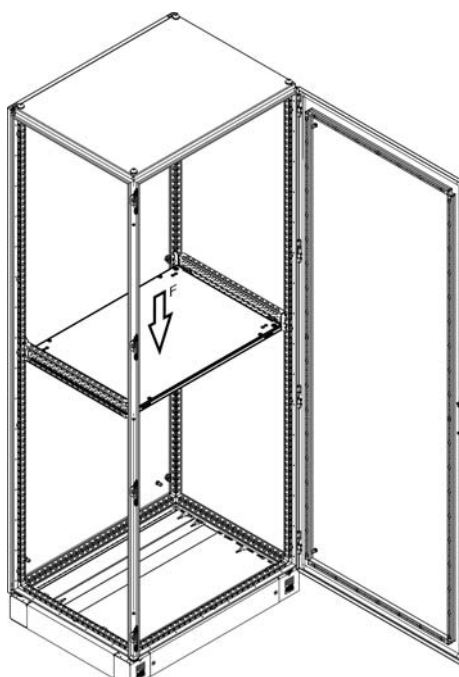

For installation in									Dimensions mm	F [N]	Model No.
Enclosure width mm				Enclosure depth (side) mm							
400	600	800	1000	1200	400	500	600	800			
■	■				■		■		500 x 300	1500	8617.510
	■					■	■		500 x 400	1700	8617.520
	■						■		500 x 500	1700	8617.530
	■	■					■	■	500 x 700	1700	8617.540
	■						■		500 x 775	1700	8617.550
■		■			■			■	700 x 300	1200	8617.560
		■				■		■	700 x 400	1500	8617.570
		■						■	700 x 700	1700	8617.580
■			■		■				900 x 300	700	8617.590
			■			■			900 x 400	900	8617.600
	■		■				■		900 x 500	1500	8617.610
■				■	■				1100 x 300	700	8617.620
				■		■			1100 x 400	900	8617.630
	■			■			■		1100 x 500	1200	8617.640

### 4.1 Enclosure panels

#### Partial assembly plate (VX25, VX SE)


Partial assembly plates are used to accommodate additional components inside the enclosure and are extremely flexible to use. For optional installation either upright as a vertical mounting surface, or lying flat as a horizontal base. Attached either directly to the enclosure section or another partial assembly plate.

#### Note:


For VX SE in conjunction with adaptor rail VX

Dimensions mm	Model No.
500 x 400	<b>8617.660</b>
500 x 600	<b>8617.661</b>
600 x 400	<b>8617.662</b>
600 x 600	<b>8617.663</b>
800 x 400	<b>8617.664</b>
800 x 600	<b>8617.665</b>

Vertical installation  
Load value F = 1700 N

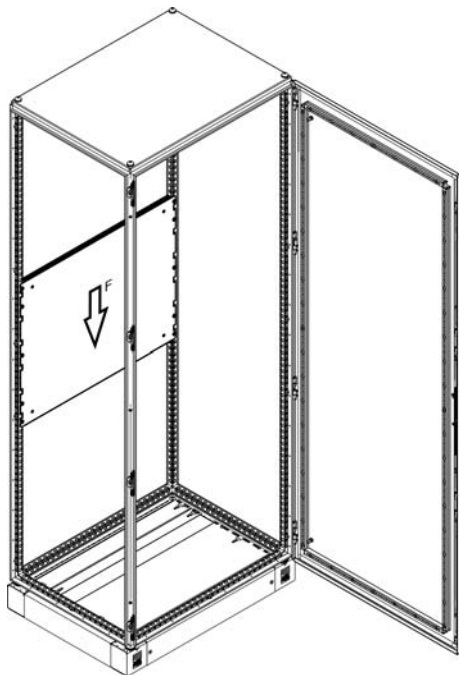

Horizontal installation  
Load value F = 600 N

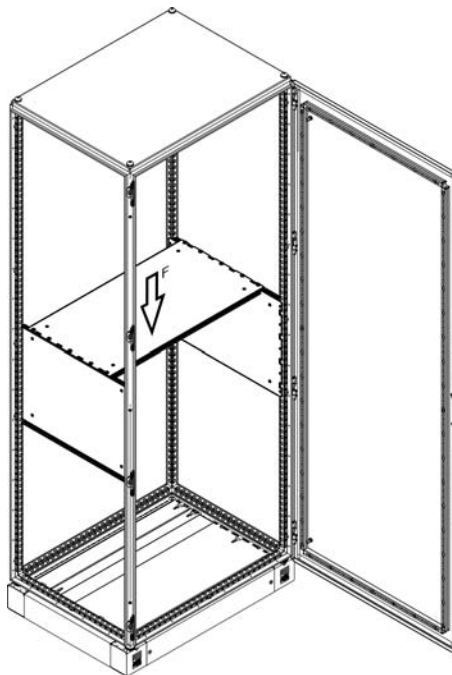

# Enclosure systems VX25, VX SE

## Installation variants


### 4.2 482.6 mm (19") installation system

#### Swing frame, small (VX25, VX SE)

Provided the Rittal assembly components offer adequate protection against tipping over, the following maximum static loads apply to enclosures: See table


#### Note:

– For VX SE in conjunction with adaptor rail VX

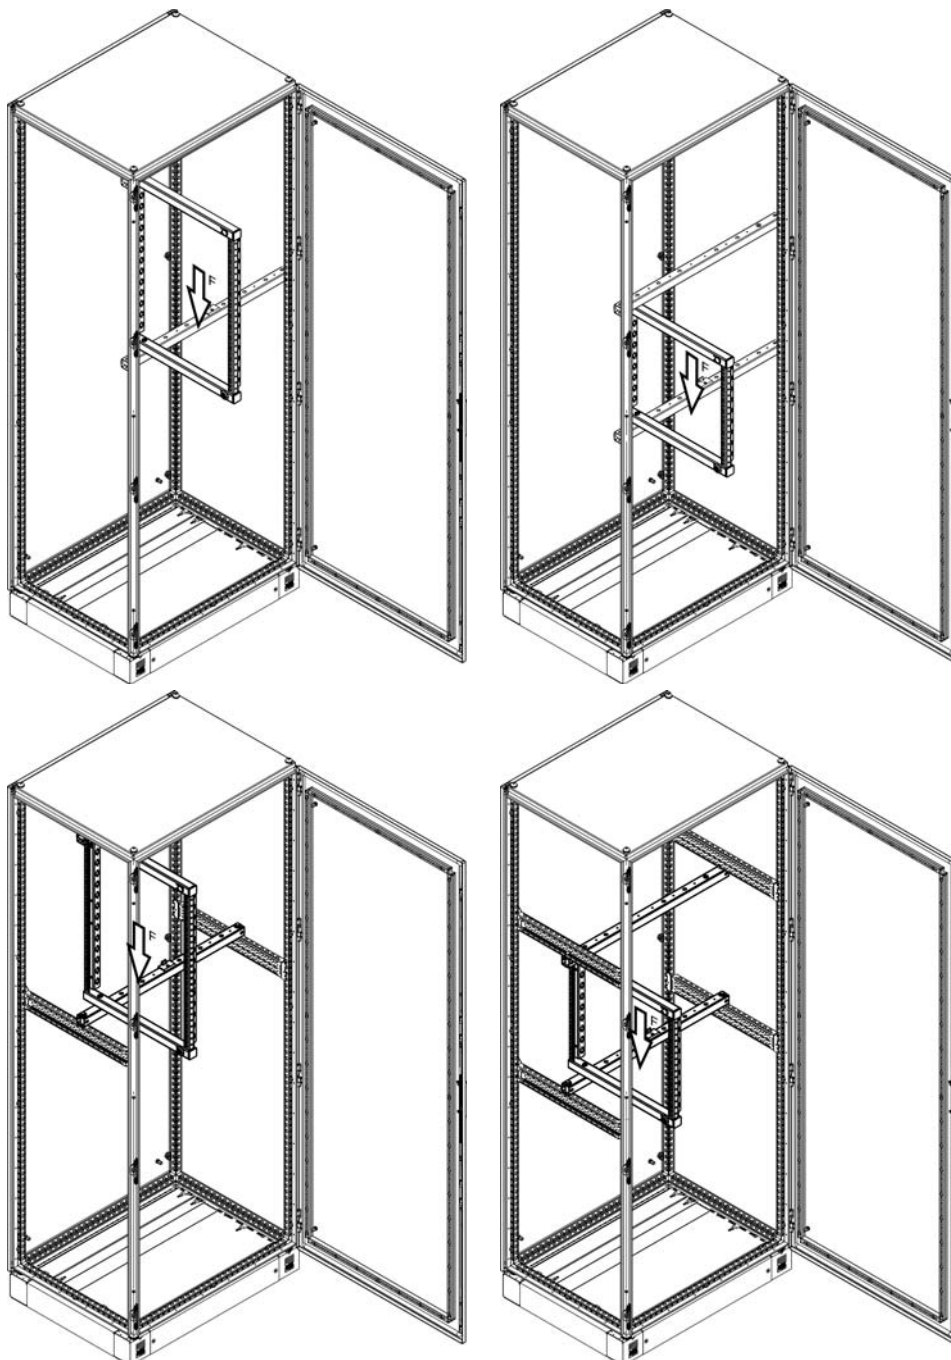


For enclosure width mm	F [N]	U	Model No.
600	150	3	8619.500
	300	6	8619.510
	450	9	8619.520
	500	12	8619.530
	500	15	8619.540
800	500	18	8619.550
	150	3	8619.500
	300	6	8619.510
	450	9	8619.520
	500	12	8619.530
	500	15	8619.540
	500	18	8619.550


Front, top/bottom

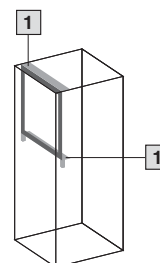

Set back, top/bottom

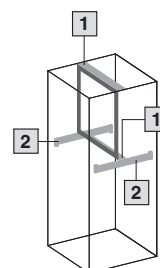

Set back, front/centre

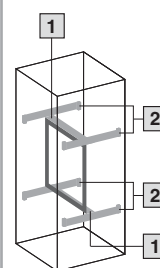

1 Installation kit	1 pc(s).	For enclosure width mm	
		600	800
		8619.600	8619.610
2 Punched section with mounting flange 23 x 64 mm, 2 or 4 pc(s) required	For enclosure depth mm		
	400	4 pc(s).	8617.110
	500	4 pc(s).	8617.120
	600	4 pc(s).	8617.130
	800	4 pc(s).	8617.140



### 4.2 482.6 mm (19") installation system

#### Swing frame, large (VX25, VX SE)

The enclosure must be adequately attached to ensure its stability. With the large swing frame, the maximum overall load is determined by the installation kits used.


#### Note:

- When using the 180° hinge (Model No. 8619.051), a maximum load of 1500 N is supported.

#### Installation kit

For enclosure width mm	F [N]	Model No.
600	3500	<b>8619.040</b>
800	3500	<b>8619.041</b>
1200	1500 <sup>1)</sup>	<b>8619.042</b>

<sup>1)</sup> For two installed swing frames, hinged on the outside, a max. overall load of 1000 N per swing frame applies.

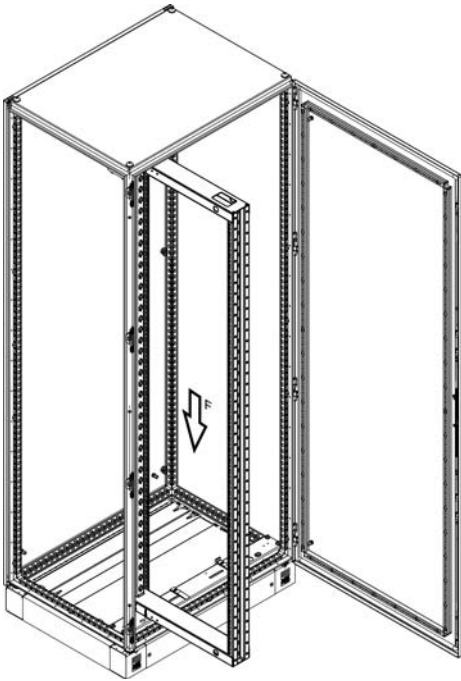

# Enclosure systems VX25, VX SE


## Installation variants

### 4.2 482.6 mm (19") installation system

#### Adaptor section, 482.6 mm (19") (VX25, VX SE)

For mounting electronic components, subracks and other 482.6 mm (19") equipment. Adaptor sections may be shortened for partial assemblies.

The load value with two fitted 482.6 mm (19") adaptor sections is  $F = 460 \text{ N}$ .

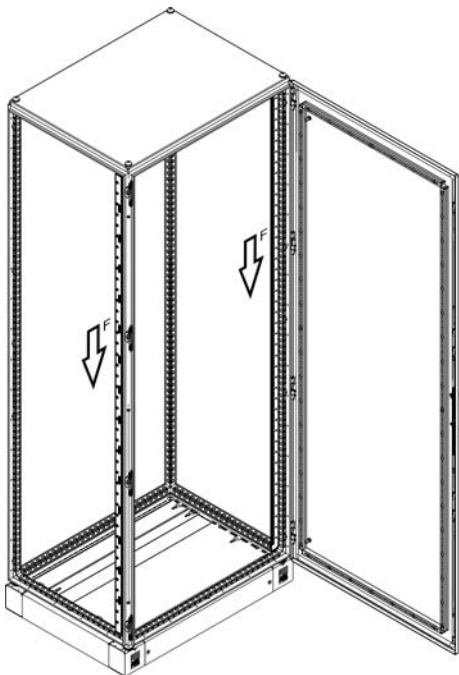

For enclosure height mm	U	Model No.
1600	33	8619.300
1800	38	8619.310
2000	42	8619.320


**Note:**

- For VX SE in conjunction with adaptor rail VX

#### Adaptor piece, 482.6 mm (19") (VX25, VX SE)

For mounting electronic components, subracks and other 482.6 mm (19") equipment.

The load value with two fitted 482.6 mm (19") adaptor pieces is  $F = 300 \text{ N}$ .

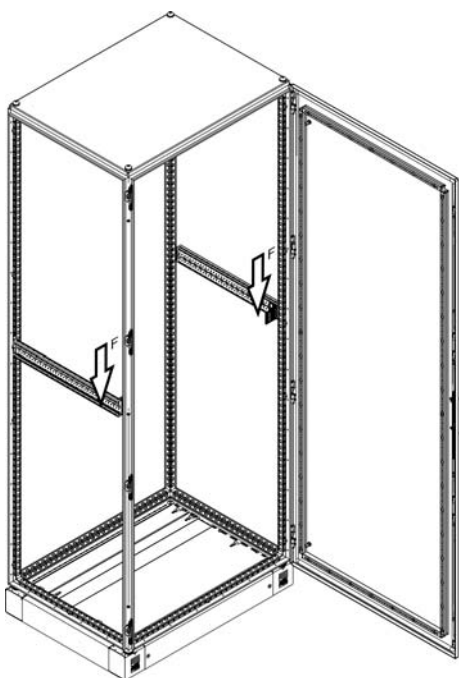

U	Model No.
1	8619.330


**Note:**

- For VX SE in conjunction with adaptor rail VX

### 4.2 482.6 mm (19") installation system


Slide rail VX for adaptor section 482.6 mm (19")  
with attachment on both sides

For enclosure depth mm	F [N] per slide rail	Model No.
500	110	<b>8613.151</b>
600	110	<b>8613.161</b>
800	130	<b>8613.181</b>

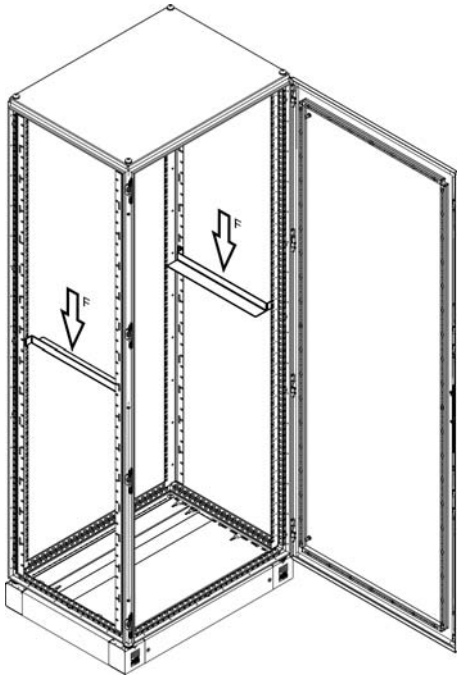

Slide rail VX for adaptor section 482.6 mm (19")  
with attachment on one side

Length mm	F [N] per slide rail	Model No.
270	230	<b>4531.001</b>

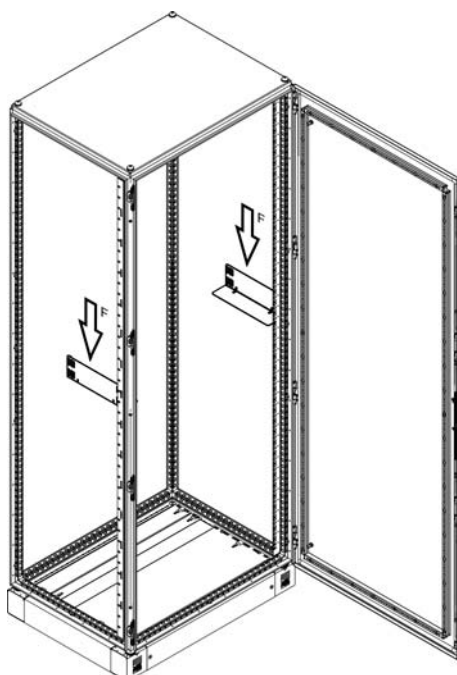

# Enclosure systems VX25, VX SE

## Installation variants


### 4.3 Rail systems, vertical installation

**Punched sections with mounting flanges, 18 x 64 mm, 23 x 64 mm, 23 x 89 mm and punched sections without mounting flanges, 23 x 64 mm**

Variable, with rows of holes for universal interior installation or partial assembly. Simply locate into punchings and screw-fasten.

**Note:**

– For VX SE in conjunction with adaptor rail VX

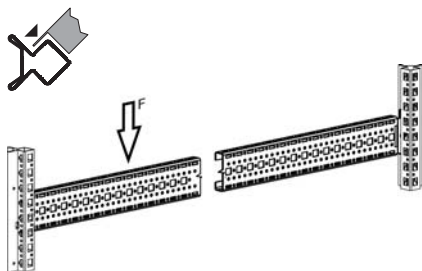


**Punched section with mounting flange, 18 x 64 mm (VX25)**

for the outer mounting level

For enclosure width/height/depth mm	F [N] <sup>1)</sup>	Model No.
300	2400	<b>8617.000</b>
400	2400	<b>8617.010</b>
500	2400	<b>8617.020</b>
600	2400	<b>8617.030</b>
800	1800	<b>8617.040</b>
1000	1400	<b>8617.050</b>
1200	1200	<b>8617.060</b>

<sup>1)</sup> The maximum admissible overall load capacity of the enclosure must not be exceeded. Force data only applies to a symmetrical arrangement.

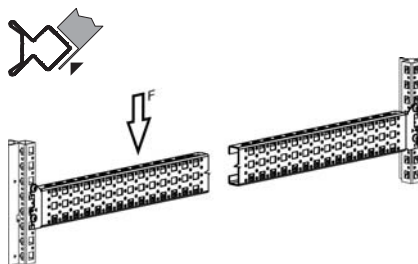


**Punched section with mounting flange, 23 x 64 mm (VX25, VX SE)**

for the inner mounting level

For enclosure width/height/depth mm	F [N] <sup>1)</sup>	Model No.
300	2400	<b>8617.100</b>
400	2400	<b>8617.110</b>
500	2400	<b>8617.120</b>
600	2400	<b>8617.130</b>
800	1800	<b>8617.140</b>
1000	1400	<b>8617.150</b>
1200	1200	<b>8617.160</b>
1400	800	<b>8617.170</b>
1600	800	<b>8617.180</b>
1800	800	<b>8617.190</b>
2000	700	<b>8617.200</b>
2200	650	<b>8617.210</b>

<sup>1)</sup> The maximum admissible overall load capacity of the enclosure must not be exceeded. Force data only applies to a symmetrical arrangement.

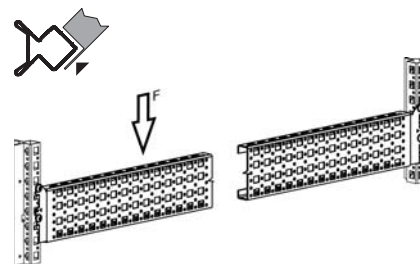


**Punched section with mounting flange, 23 x 89 mm, stainless steel (VX25, VX SE)**

for the inner mounting level

For enclosure width/height/depth mm	F [N] <sup>1)</sup>	Model No.
400	2400	<b>8100.730</b>
500	2400	<b>8100.731</b>
600	2400	<b>8100.732</b>
800	1800	<b>8100.733</b>

<sup>1)</sup> The maximum admissible overall load capacity of the enclosure must not be exceeded. Force data only applies to a symmetrical arrangement.

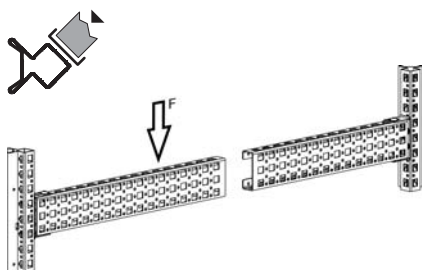

**Punched section without mounting flange, 23 x 64 mm (VX25, VX SE)**

For enclosure width/height/depth mm	F [N] <sup>1)</sup>	Model No.
400	1125	<b>8100.740</b>
500	1125	<b>8100.741</b>
600	1125	<b>8100.742</b>
800	750	<b>8100.743</b>
1200	635	<b>8100.745</b>

<sup>1)</sup> The maximum admissible overall load capacity of the enclosure must not be exceeded. Force data only applies to a symmetrical arrangement.




### 4.3 Rail systems, horizontal installation

**Punched sections with mounting flanges, 18 x 64 mm, 23 x 64 mm, 23 x 89 mm and punched sections without mounting flanges, 23 x 64 mm**

Variable, with rows of holes for universal interior installation or partial assembly. Simply locate into punchings and screw-fasten.

**Note:**

– For VX SE in conjunction with adaptor rail VX

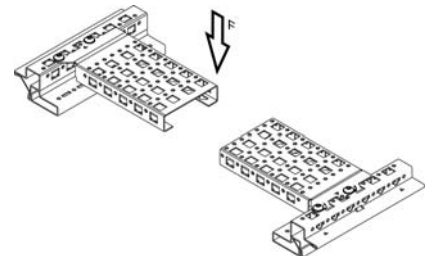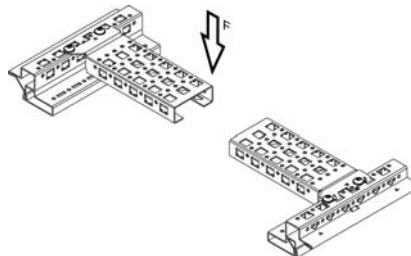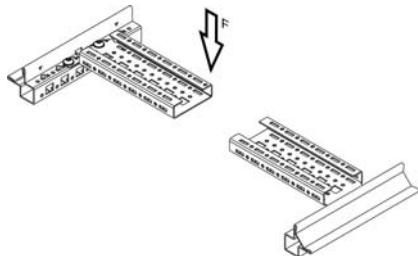

**Punched section with mounting flange, 18 x 64 mm (VX25)**

for the outer mounting level

For enclosure width/height/depth mm	F [N] <sup>1)</sup>	Model No.
300	600	<b>8617.000</b>
400	600	<b>8617.010</b>
500	600	<b>8617.020</b>
600	600	<b>8617.030</b>
800	380	<b>8617.040</b>
1000	240	<b>8617.050</b>
1200	140	<b>8617.060</b>

<sup>1)</sup> The maximum admissible overall load capacity of the enclosure must not be exceeded. Force data only applies to a symmetrical arrangement.

**Punched section with mounting flange, 23 x 64 mm (VX25, VX SE)**

for the inner mounting level

For enclosure width/height/depth mm	F [N] <sup>1)</sup>	Model No.
300	800	<b>8617.100</b>
400	800	<b>8617.110</b>
500	800	<b>8617.120</b>
600	800	<b>8617.130</b>
800	550	<b>8617.140</b>
1000	340	<b>8617.150</b>
1200	170	<b>8617.160</b>


<sup>1)</sup> The maximum admissible overall load capacity of the enclosure must not be exceeded. Force data only applies to a symmetrical arrangement.

**Punched section with mounting flange, 23 x 89 mm, stainless steel (VX25, VX SE)**

for the inner mounting level

For enclosure width/height/depth mm	F [N] <sup>1)</sup>	Model No.
400	420	<b>8100.730</b>
500	420	<b>8100.731</b>
600	420	<b>8100.732</b>
800	275	<b>8100.733</b>

<sup>1)</sup> The maximum admissible overall load capacity of the enclosure must not be exceeded. Force data only applies to a symmetrical arrangement.

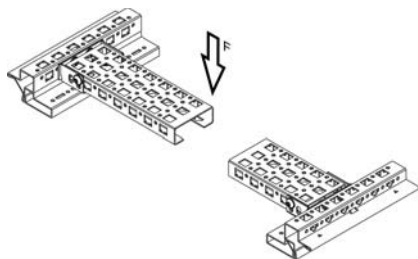

**Punched section without mounting flange, 23 x 64 mm (VX25, VX SE)**

For enclosure width/height/depth mm	F [N] <sup>1)</sup>	Model No.
400	1000	<b>8100.740</b>
500	1000	<b>8100.741</b>
600	1000	<b>8100.742</b>
800	400	<b>8100.743</b>
1200	170	<b>8100.745</b>


<sup>1)</sup> The maximum admissible overall load capacity of the enclosure must not be exceeded. Force data only applies to a symmetrical arrangement.

# Enclosure systems VX25, VX SE

## Installation variants

### 4.3 Rail systems

**Punched section with mounting flange, 14 x 39 mm (VX25, VX SE)**  
For mounting on the tubular door frame.

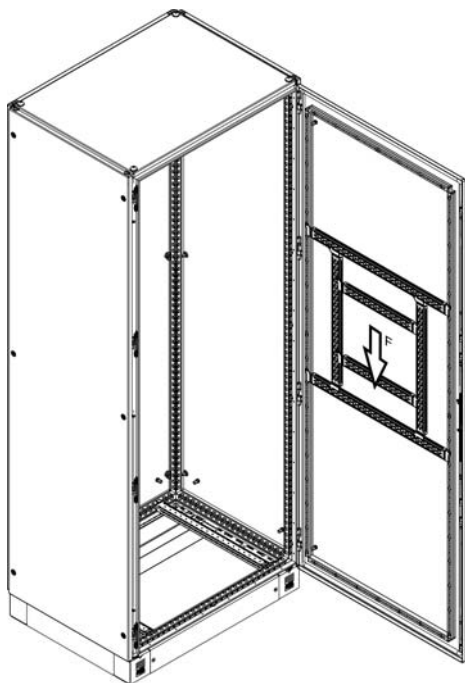


For door width mm	F [N]	Model No.
400	500	<b>8619.700</b>
500	500	<b>8619.710</b>
600	500	<b>8619.720</b>
800	260	<b>8619.730</b>
1000	130	<b>8619.750</b>

### Punched rail 18 x 39 mm (VX25, VX SE)

For variable, individual interior installation of the enclosure frame on the inner mounting level, may also be used in conjunction with other punched sections. Prepared at the rear to accommodate cable clamps for optimum cable routing inside the enclosure.

**Note:**

- For VX SE in conjunction with adaptor rail VX

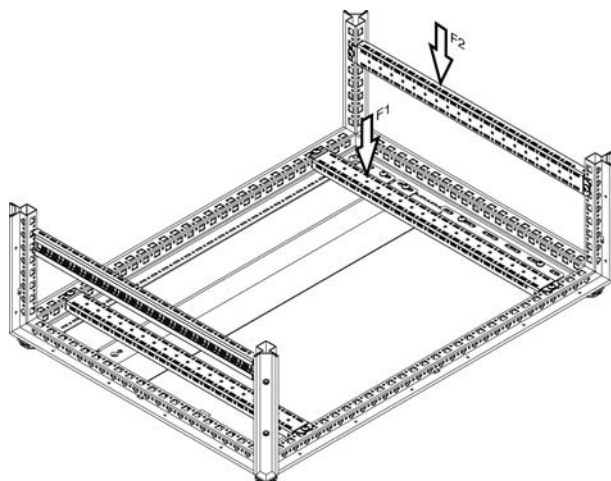

For enclosure width/depth mm	F1 [N] <sup>1)</sup>	F2 [N] <sup>1)</sup>	Model No.
400	600	1500	<b>8617.700</b>
500	600	1500	<b>8617.710</b>
600	600	1500	<b>8617.720</b>
800	600	1100	<b>8617.730</b>


<sup>1)</sup> The max. static load applied to the free-standing base assembly via the support rails must not exceed 10,000 N in total. The maximum admissible overall load capacity of the enclosure (15,000 N) must not be exceeded. Force data only applies to an evenly distributed load.



### 4.3 Rail systems

#### Support rail 75 x 20 mm (VX25, VX SE)

For heavy installed equipment, with mounting holes. Particularly suitable for the installation of base isolators.

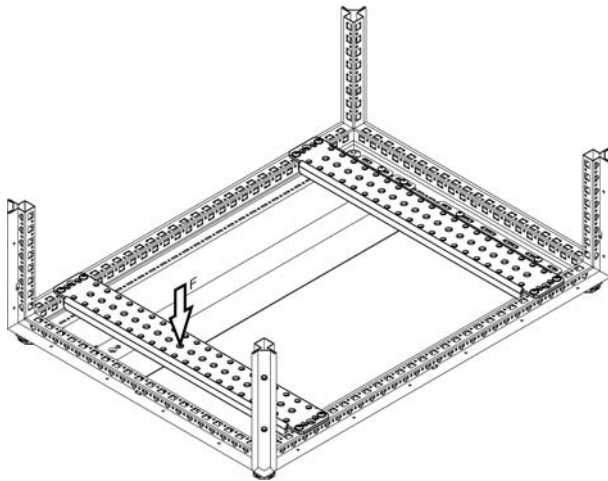


For enclosure width/depth mm	F [N] <sup>1)</sup>	Model No.	
		slotted	unslotted
400	2600	<b>4394.000</b>	–
500	2100	<b>4395.000</b>	–
600	1750	<b>4396.000</b>	<b>4396.500</b>
800	1300	<b>4398.000</b>	<b>4398.500</b>

<sup>1)</sup> The max. static load applied to the free-standing base assembly via the support rails must not exceed 10,000 N in total. The maximum admissible overall load capacity of the enclosure (15,000 N) must not be exceeded. Force data only applies to an evenly distributed load.

#### Support rail 48 x 26 mm (VX25, VX SE)

For heavy installed equipment such as transformers.

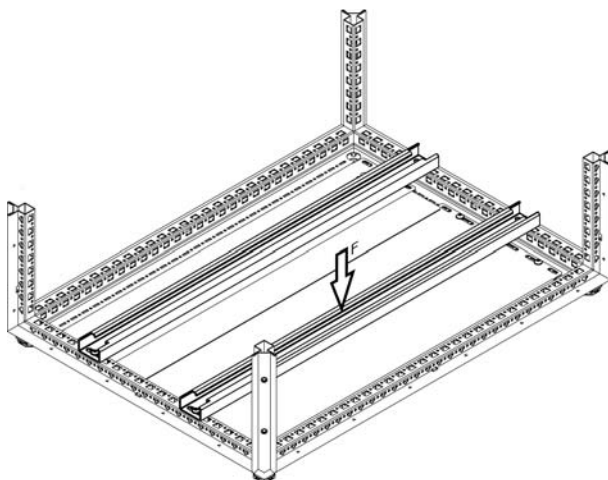

For enclosure width mm	F [N] <sup>1)</sup>	Model No.
600	3000	<b>8617.800</b>
800	2250	<b>8617.810</b>
1000	1800	<b>8617.820</b>
1200	1500	<b>8617.830</b>

<sup>1)</sup> The max. static load applied to the free-standing base assembly via the support rails must not exceed 10,000 N in total. The maximum admissible overall load capacity of the enclosure (15,000 N) must not be exceeded. Force data only applies to an evenly distributed load.


# Enclosure systems VX25, VX SE

## Installation variants

### 4.3 Rail systems


#### System divider (VX25, VX SE)

Divides the enclosure width into two zones. For example, this allows mounting plates, cable clamp rails or swing frames from 600 mm wide enclosures to be fitted in 1200 mm wide enclosures.

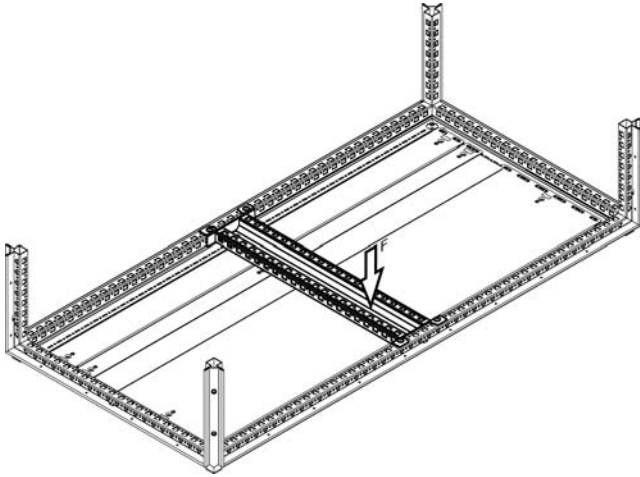


Depth mm	F [N]	Model No.
600	3600	<b>8620.901</b>

#### Screw load (VX25, VX SE)

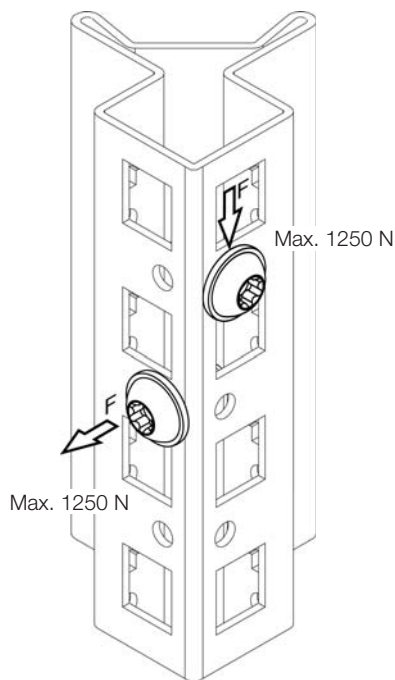

Torx screw	$M_A$ [Nm]	Model No.
BZ 5.5 x 13	5	<b>2486.600</b>

F [N]	Thread	Model No.
max. 1500	M6	<b>VX 4164.500</b>
	M8	<b>VX 4165.500</b>
	M5	<b>VX 4166.500</b>

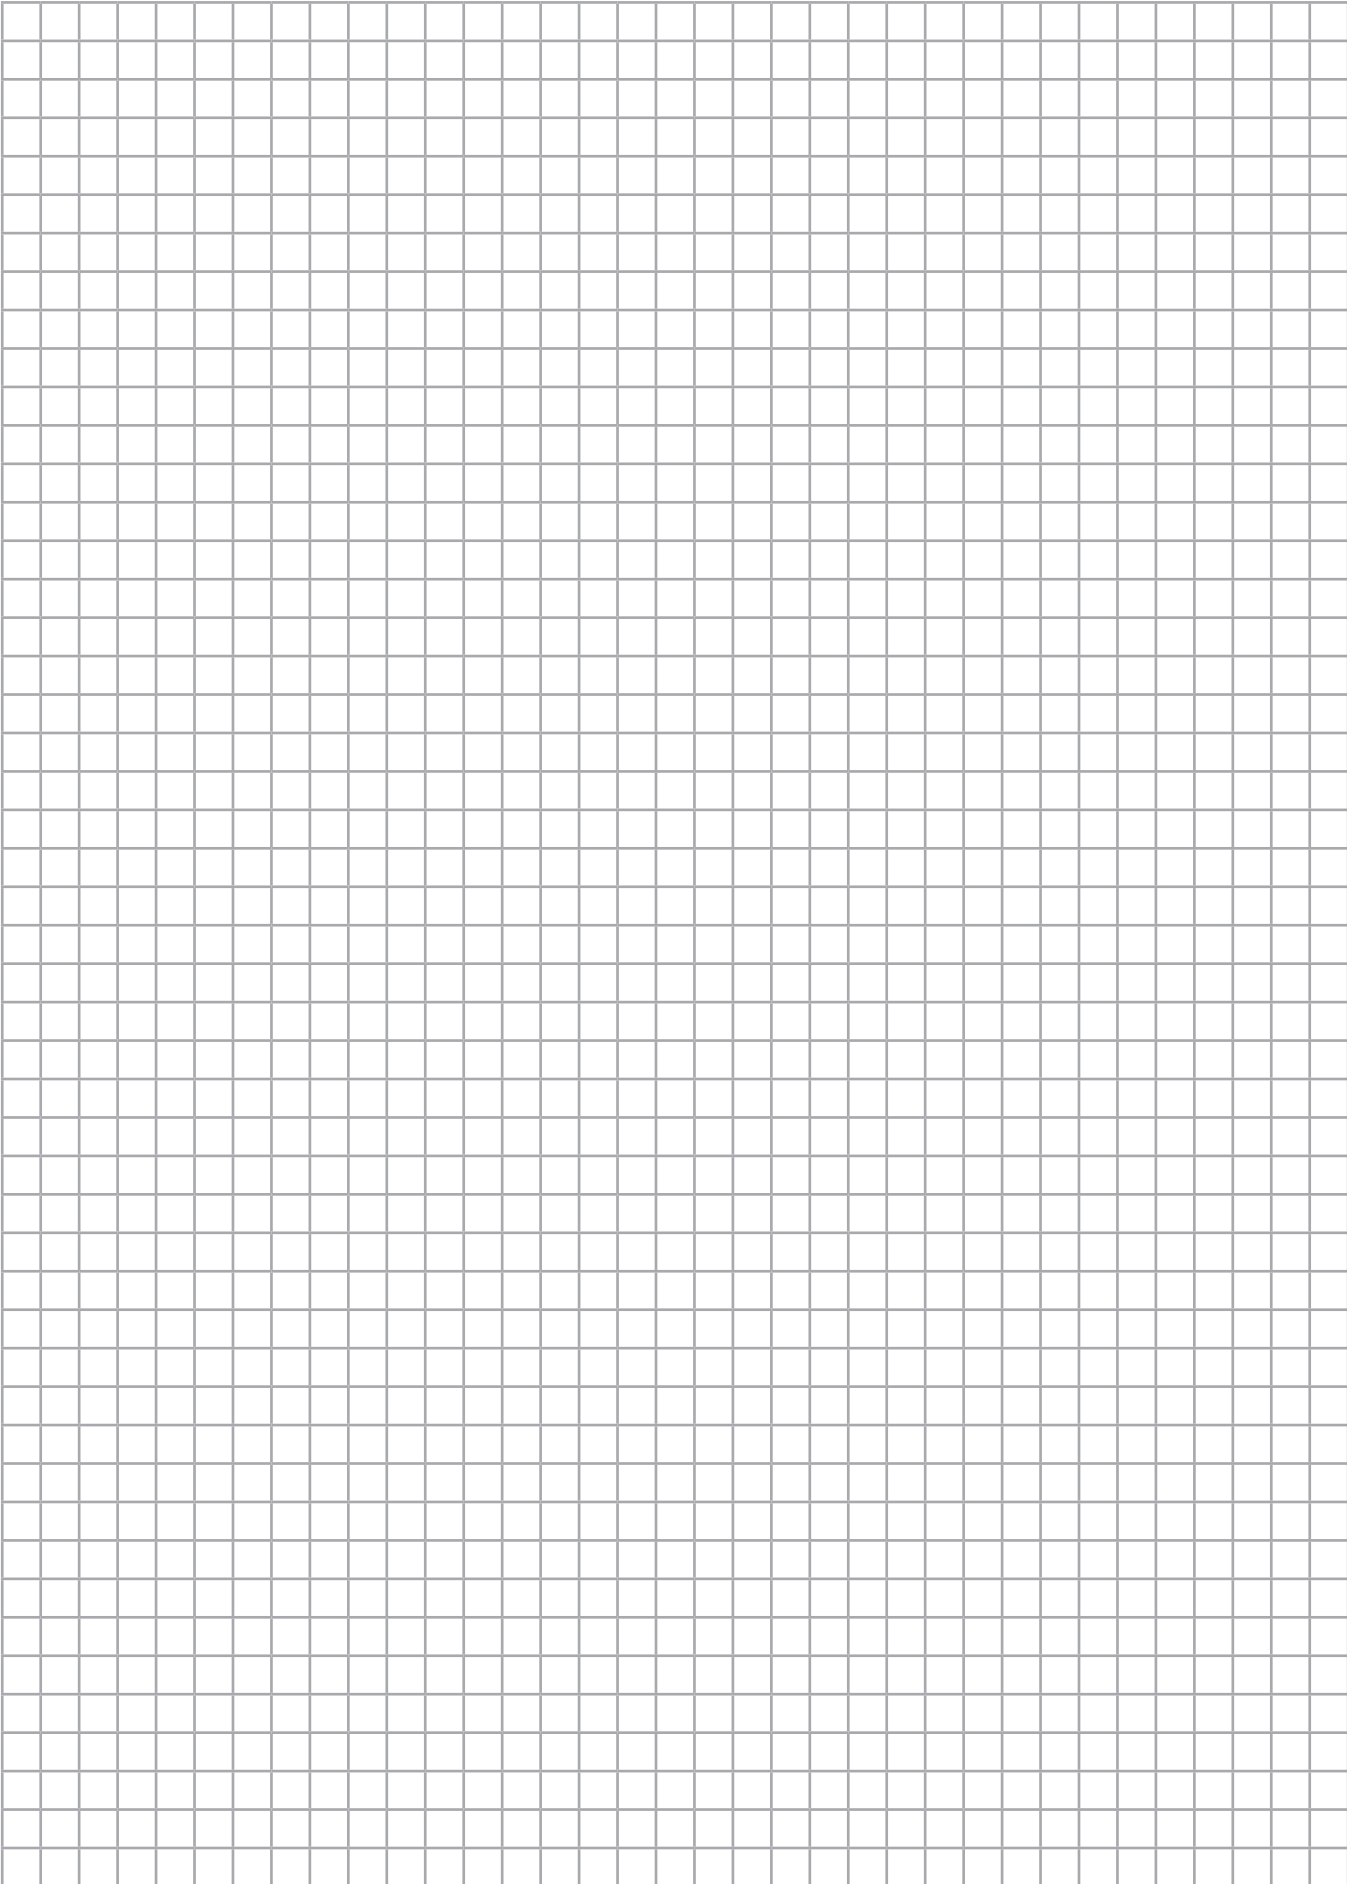

# Rittal – The System.

Faster – better – everywhere.

- Enclosures
- Power Distribution
- Climate Control
- IT Infrastructure
- Software & Services

You can find the contact details of all Rittal companies throughout the world here.



[www.rittal.com/contact](http://www.rittal.com/contact)

XWWW00234EN2312

ENCLOSURES

POWER DISTRIBUTION

CLIMATE CONTROL

IT INFRASTRUCTURE

SOFTWARE & SERVICES



FRIEDHELM LOH GROUP