

	Specify in which path the file is to be stored.
Clear log file	To delete the logfile, click "Clear log file".

7.5.9 Configure overview window

You can upload any background image for the overview window to the CMC-TC Master II. You can then position the Processing Units appropriately. and proceed as follows:

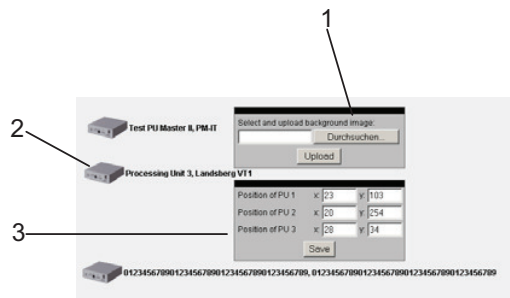


Fig. 30 Configure overview window

Key

- 1 Upload background image
 - 2 Processing Unit representation
 - 3 Position window for the Processing Unit
- To upload a background image to the CMC-TC Master II, click "Find". Select the path and the image that you want to use as background image.
 - Then click "Upload". After the upload, the image appears in the Overview window.
 - You can position the Processing Units as required. Click with the left-hand mouse key once on the Processing Unit and drag the Processing Unit to the required position. Alternatively, you can enter the values for the x- and y-position in the fields. Once you have entered all values for the position, click "Save".

7.5.10 Update CMC-TC Master II

Updates for the Master II will be regularly available in the Internet.

Look regularly on the page:

http://www.rimatrix5.com/service_support/downloads.asp (Security area) and check your CMC-TC master software. To load the update to the Master, proceed as follows:

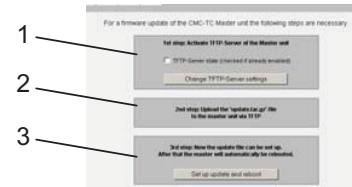


Fig. 31 Update CMC-TC Master II

Key

- 1 Activate CMC-TC Master TFTP server
- 2 Information window for the upload
- 3 Start installation and perform restart

Navigation	
Admin – Firmware Update	
Parameter	Explanation
Activate TFTP server of the Master unit	Activate the checkbox in the first step. Then click "Change TFTP server settings".
Upload the "update.tar.gz" file to the master unit via TFTP	Now use TFTP to load the firmware update to the CMC-TC Master II. fttp-i 192.168.30.100 put update.tar.gz
3rd step:...	Click "Setup and reboot". The firmware update will now be installed on the CMC-TC Master II. Once the installation has completed, the CMC-TC Master performs a reboot.